

REVERSE POLARITY FEATURE ON LC-LC FIBER CABLES

PROCEDURE

STEP 1: Remove the dust cable caps from the fiber assembly.



STEP 2: Hold the fiber assembly with the pull tab down. With your left hand, hold the assembly housing and with your right hand, pull the boot away.



STEP 3: Using a small flat screwdriver, place the tip under the rear latch of the assembly housing. Slightly twist the screwdriver to release the housing while pulling back exposing the black inner body.

NOTE: If possible, you may use your fingernail to perform this step.







STEP 4: Turn over the fiber assembly and notice the position of the orange and blue fiber strands. Carefully lift up each small aqua color LC from the black inner body. Switch their positions and gently re-seat each LC back in the inner body.



STEP 5: Next, with your left hand, hold and press on the locking tab of the two LC connectors. With your right hand, slide up the assembly housing back into its original position.

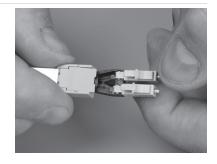

STEP 6: Finally, slide the boot up to the housing back in its original position covering the silver crimp ferrule.

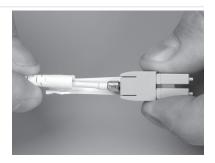

STEP 7: Please re-clean the fiber assembly end face before use.

reverse-polarity-LC-LC_fiber_rev1.pdf